



# Instructions for hauliers

## Safety, regulation and traffic guidelines

H&R Ölwerke Schindler GmbH  
Neuhöfer Brückenstraße 127-152, 21107 Hamburg

HUR-VBS : EK-04-07-02  
Page : 1 of 2  
Version : 01



Passengers and animals travelling with external hauliers are not permitted access to company premises.

When driving on company premises the manhole covers and all openings associated with the product zone must be kept closed.



The unnecessary running of engines (e.g. for warming up) is forbidden for environmental protection reasons.

The cleaning of all vehicles and containers, and the disposal of waste and residual quantities is forbidden on the factory premises.



**Smoking, fire and naked flames – also in closed vehicles – are forbidden!**

Rooms, in which smoking is allowed, are marked accordingly.



**Alcohol is strictly forbidden throughout the entire factory!**

Alcoholic drinks and other intoxicants must not be brought into the factory. Working under the influence of alcohol and/or intoxicants is forbidden.



**Photography and filming is prohibited!**

Special approval to photograph and film must be obtained in writing from the responsible department.

**The Road Traffic Regulations (StVO) and Road Traffic Licensing Regulations are valid on company premises!**

The following specific rules are to be observed:

- Maximum speed: 25 km/h
- Seat belt must be worn
- Parking allowed only in marked areas
- Vehicles must not obstruct the factory roads
- Vehicles must not access the production facilities
- Vehicles should be parked so that traffic routes, factory and emergency exits, fire-hydrants and other fire fighting equipment are always accessible.



**Code of practice for emergency**

**Emergency call: 112 (internal) in case of accidents, fire or environmental damage**

The danger zone should be vacated immediately in the event of fire and other emergency situations.



Fire alarm (Siren) : 3 x 12 sec.

Gas outburst (Typhon) : 10 x 1,5 sec. **Driving prohibited for all vehicles**

All-clear (Typhon) : 20 sec.



Drivers must return immediately to their vehicles. The assembly point in the event of an alarm is determined by the Operation Control.

The instructions of the Supervisors, Safety and Fire Service Personnel representing H&R Ölwerke Schindler must be strictly adhered to.



Access to company premises is permitted only in the stipulated protective clothing (safety shoes, dungarees and long sleeved protective jacket).



Company equipment can only be used by the authorised personnel.



Directing vehicles in the loading and unloading zones is made by our employees.




The supporting and safety equipment available must be used when working on your own TKW on factory premises.



Engines and auxiliary heating must be switched off in the loading zone.

Drivers must remain with their vehicles throughout the entire loading and unloading process in order to action immediately in the event of danger.

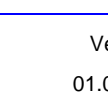

All connectors must be fitted with blind plugs and the manhole covers closed after loading and unloading.

In the event of leakage from a vehicle it is forbidden to leave the loading and unloading zone and/or the factory premises.

If leakage occurs the loading and unloading zone must be visited again immediately.



**Instructions for hauliers**  
**Safety, regulation and traffic guidelines**  
H&R Ölwerke Schindler GmbH  
Neuhöfer Brückenstraße 127-152, 21107 Hamburg

HUR-VBS : EK-04-07-02  
Page : 2 of 2  
Version : 01



# H&R Ölwerke Schindler GmbH

